


HD720P Mini DV Manual

Remark: This picture only for reference

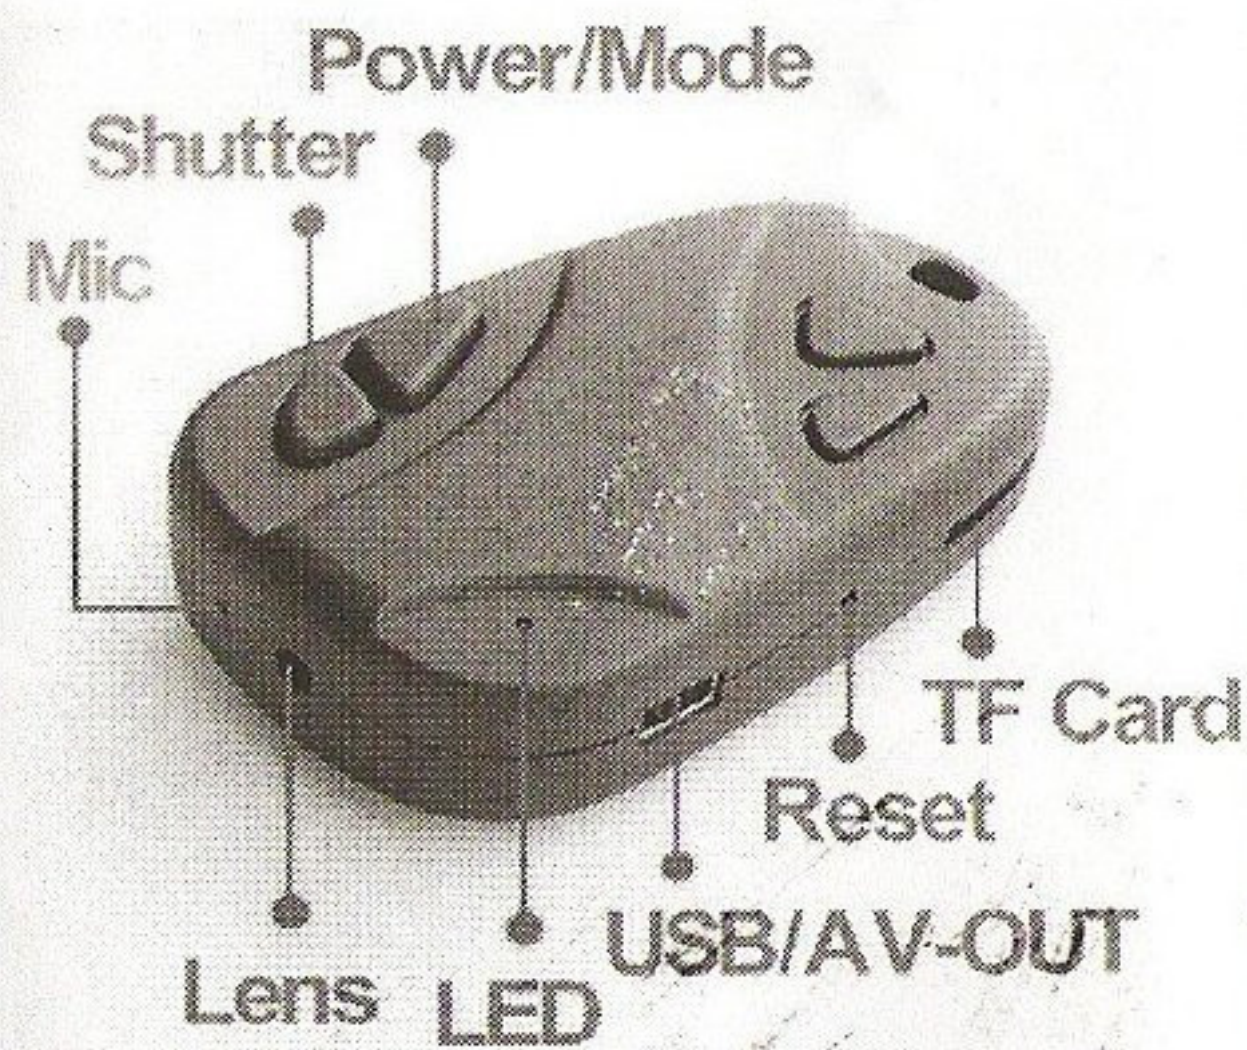

Specifications:

1. 720P high Definition Video 1280 x720
H264 30fps AVI
2. 3.0 mega pixels photo JPEG format: 2048
x 1536.jpg
3. Using as a video recorder 20 minutes close-
and-continue.
4. Support our company dedicated car charger
configuration to side recording video features
while charging.
5. USB2.0, TV-OUT(Video,Audio)
6. Mass storage. support up to 32G TF memory
card (you'd better use the SDH4 flash memory
high-speed card.)
7. PC-Webcam 640x480.
8. Easy connection with PC/Laptops, no need the
driver.
9. Built-in rechargeable high volume Lithium-ion
Battery 250mAh.
10. Built-in Charger manage IC.
11. Dimension(mm): ① 51 (L) x 32 (W) x14 (H)

Function description:

1. To turn camera on or off, hold " power " until
indicator light changes.
2. To record video, press the " shutter " button.
The light will briefly flicker and go out as the
camera begins to record 720p HD video. The
camera will divide the resulting video files
every 20 minutes. To stop recording, press
the "shutter " button once more.
3. To enter photo mode, press " power " button.
Light turns off then on. Press the " shutter "

button to take pictures. With each press, light turns off and on and a picture will be saved to the Micro SD card.

4. To charge camera, use supplied USB cable to connect the camera to computer. A red Charging LED will light. When the camera battery is low power, connect the car charger and continue to work.
5. To access your pictures and HD video, connect the camera to your computer, and press the " power " button once.
6. To enter Webcam mode, hold both the "power" and " shutter " buttons as you connect the camera to your computer. A driver is not required.

7. How to operate AV-OUT

When camera is in Standby mode, it can do "preview/playback" operation by short-pressing the power button.

To turn off, long-pressing the power button.

In the preview state, to press the shutter button, to begin/stop recording.

When recording, red light flashed slowly on the top right corner of TV screen.

In the playback state, video/photo files are played automatically. To press the shutter button, to move to the next file.